

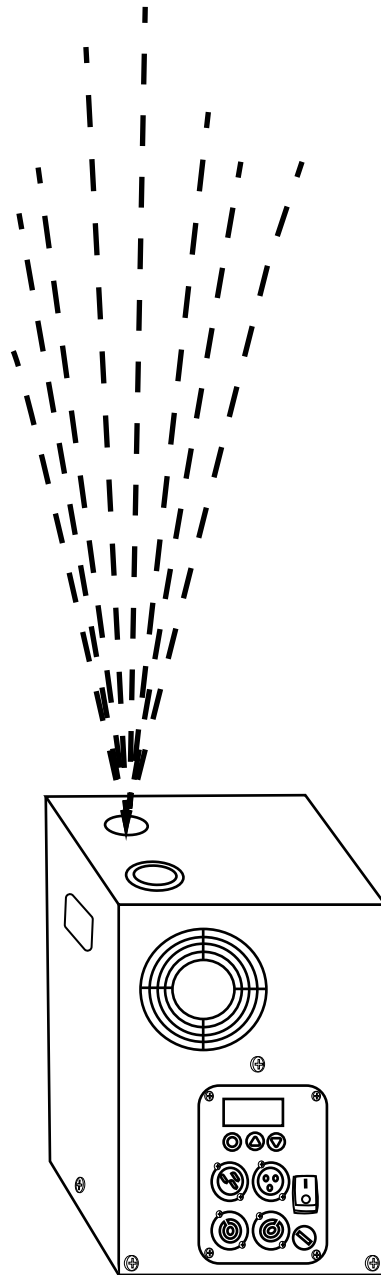


# REVOSPIN

## User Manual

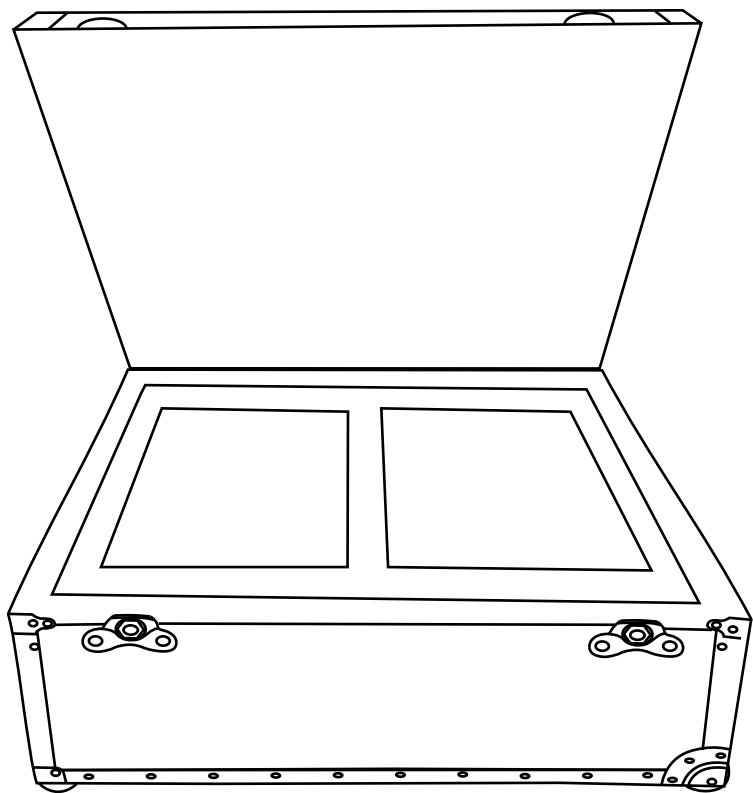


**Cold Spark**

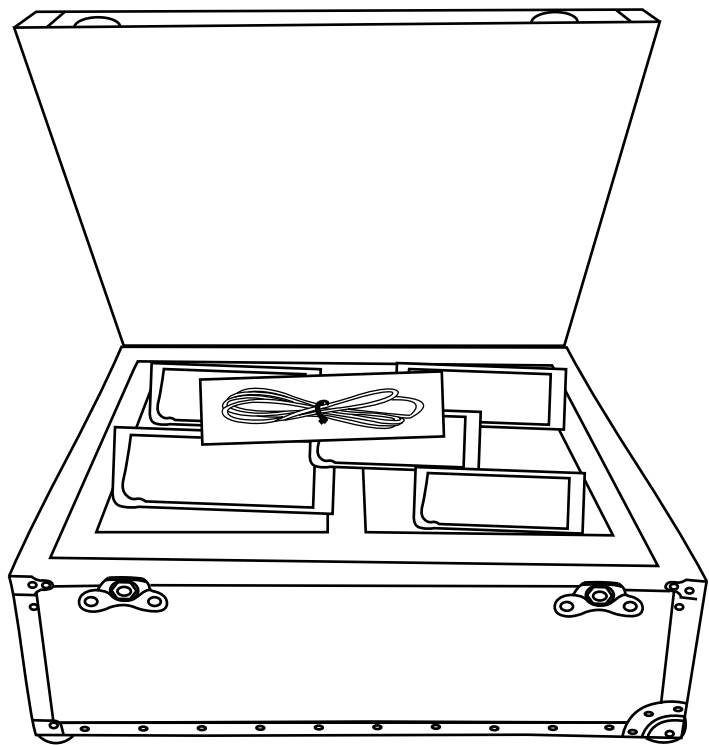


# How to Set Up


1

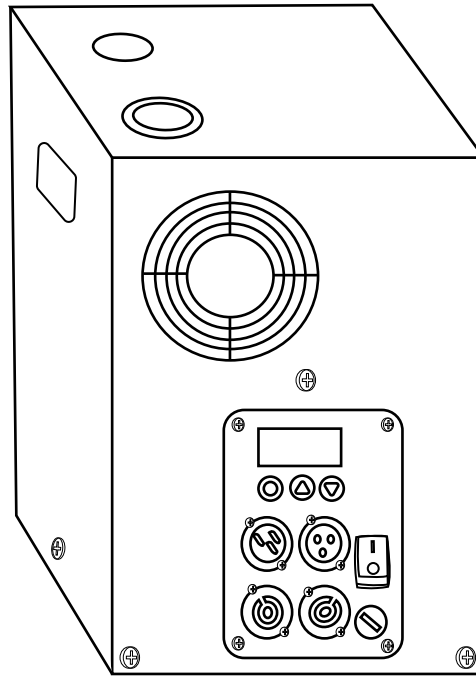

2

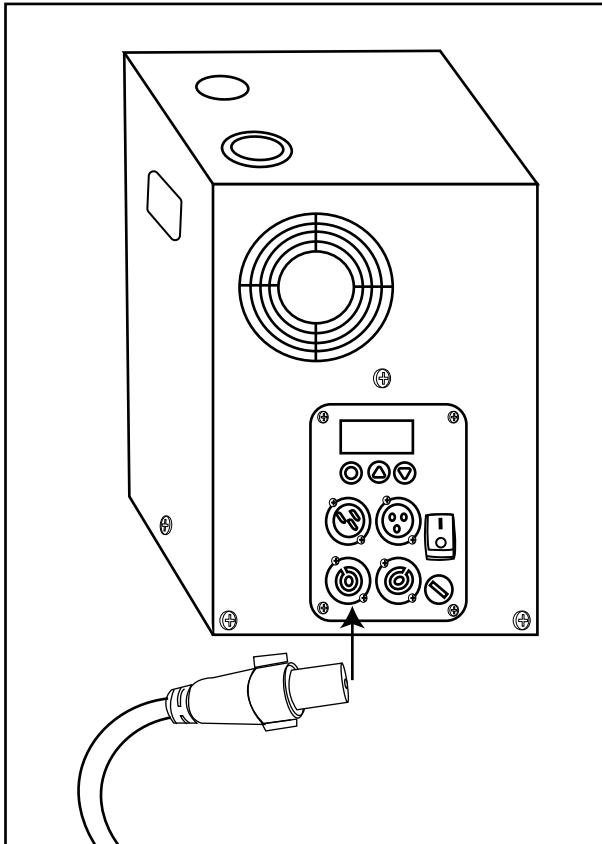


3

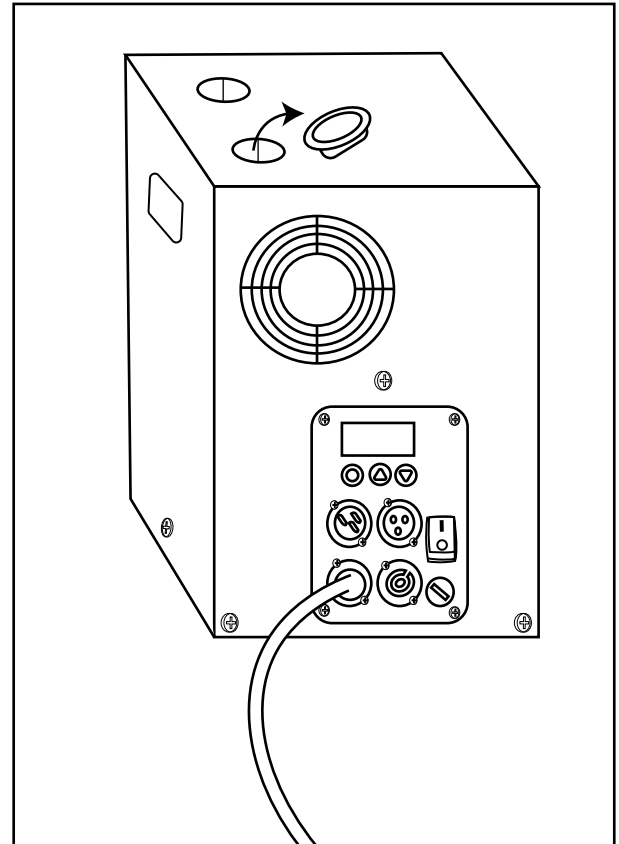


**Step 1-3** Unbox the Cold Spark and connect the power cable. Next, remove the top cover. This is where the Cold Spark powder will be inserted.


4

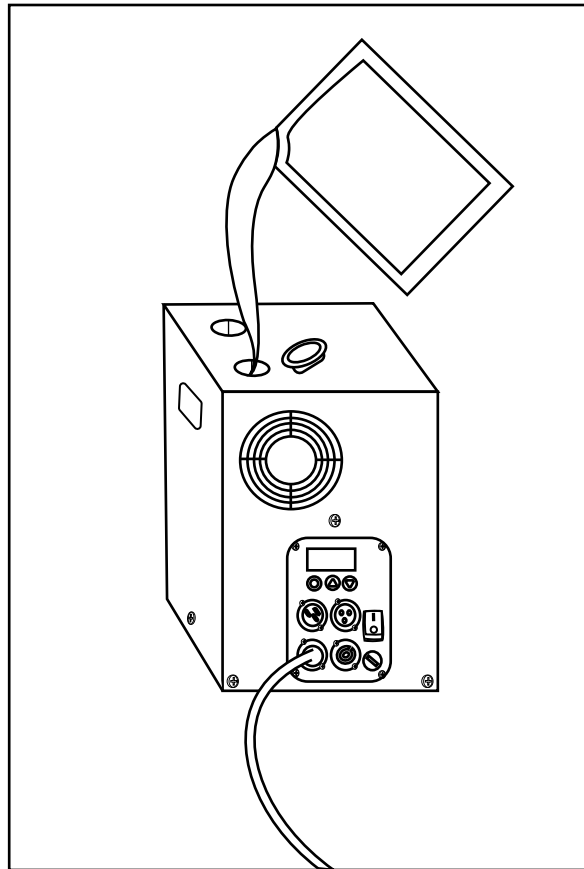



5

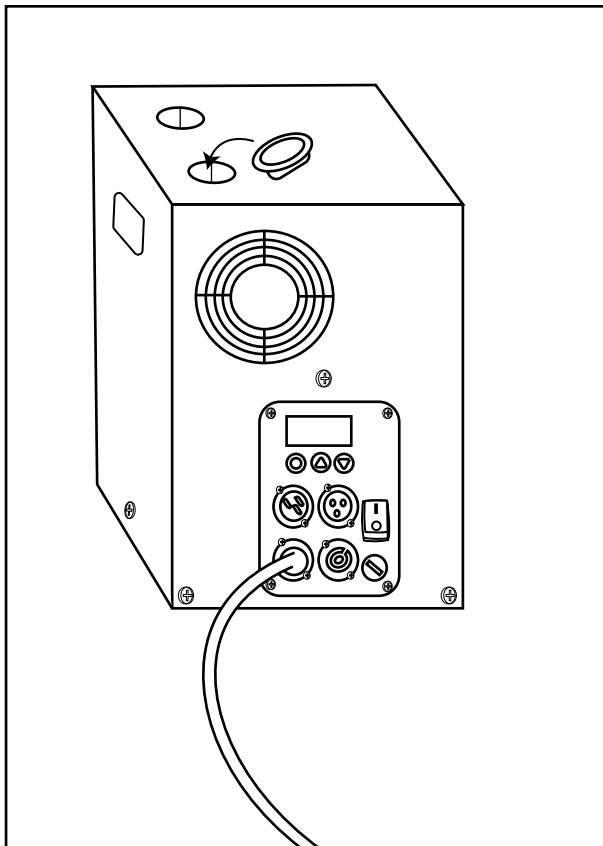



6

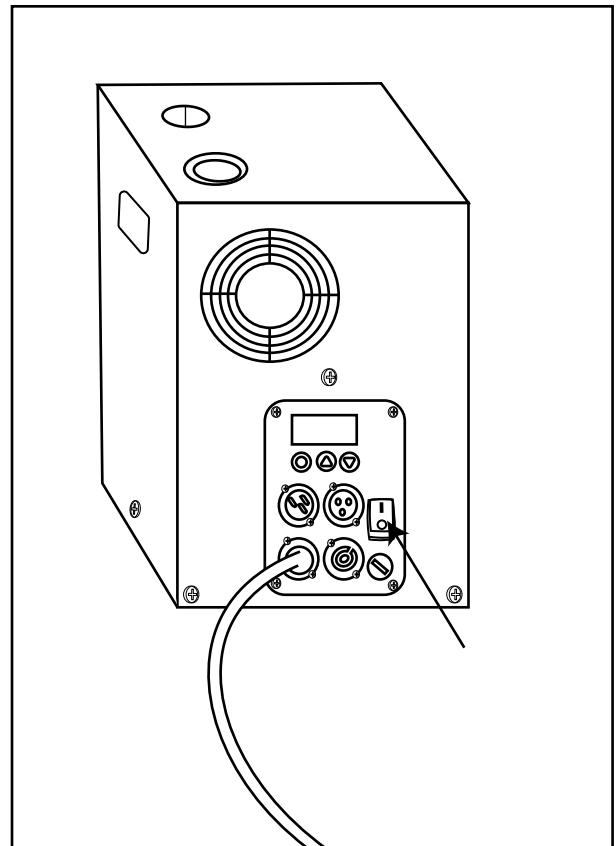

**Step 4-6** Pour 1/4 of the bag into the hole. Replace the cover and turn on the power switch.

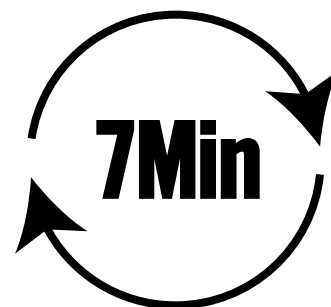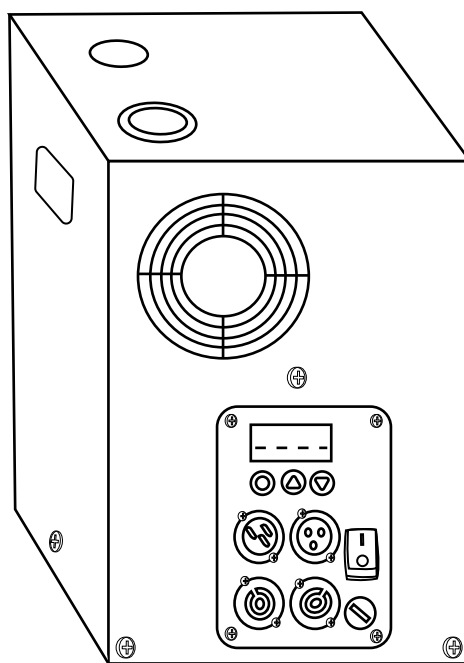

Time to heat up is 7 minutes, please allow the Cold Spark to heat up before operating with the supplied remote.

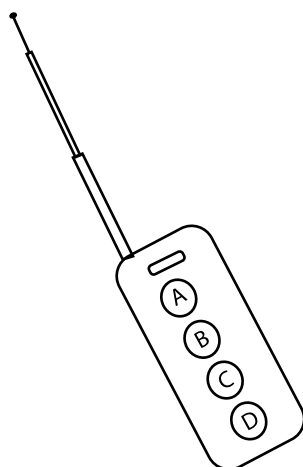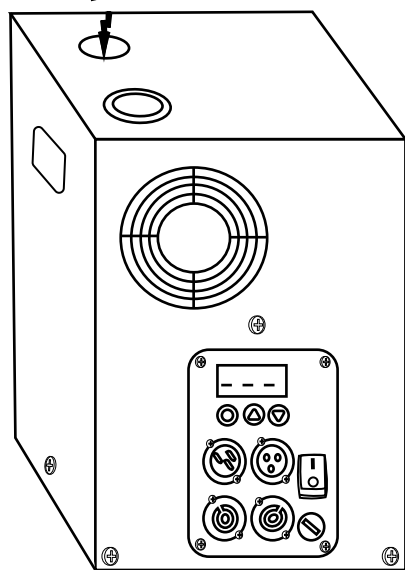

**Class 1.1G - UN0094 Flashpowder**