








REVOSPIN

User Manual




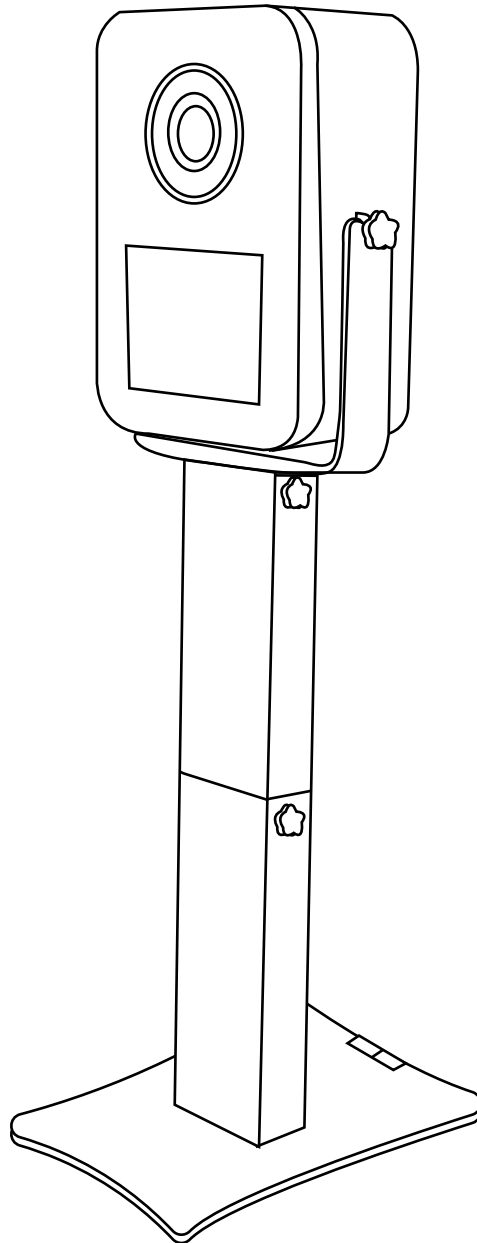


T-12 LED

Parts

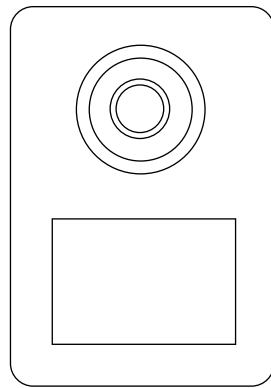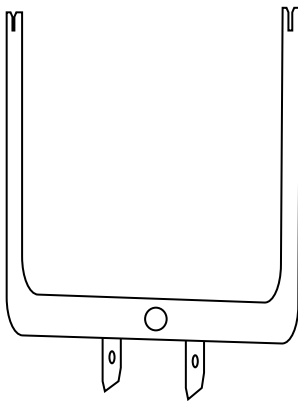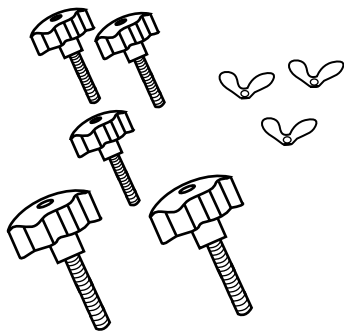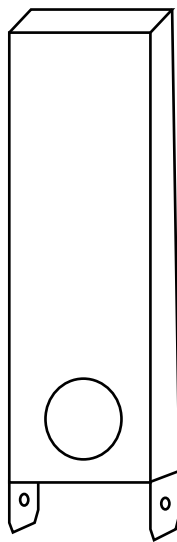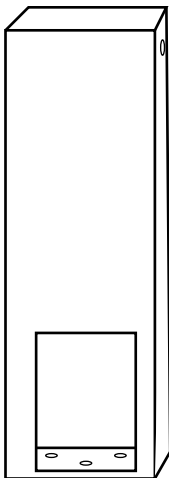
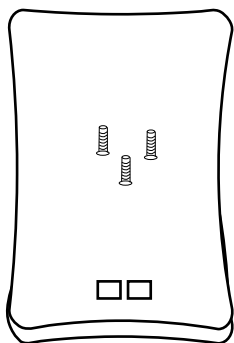


Printer shelf and cover sold separately

 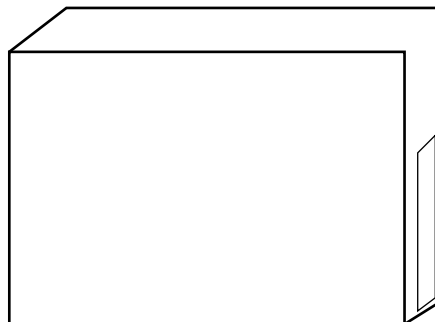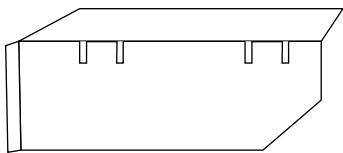
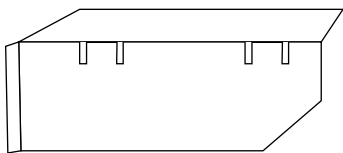


How to Set Up

1

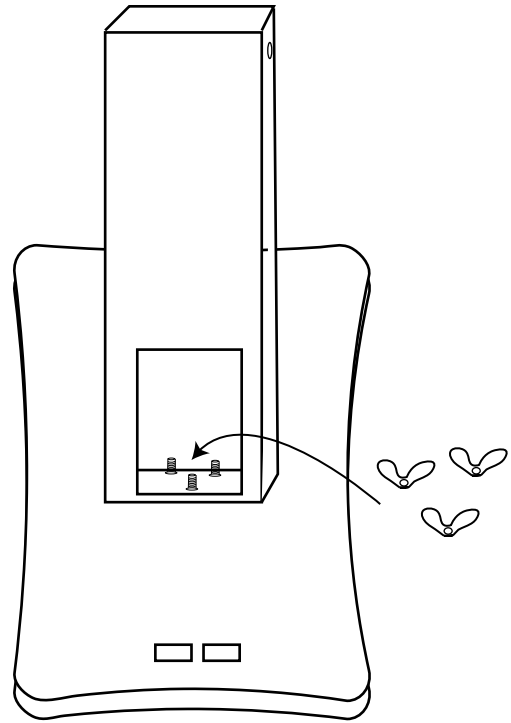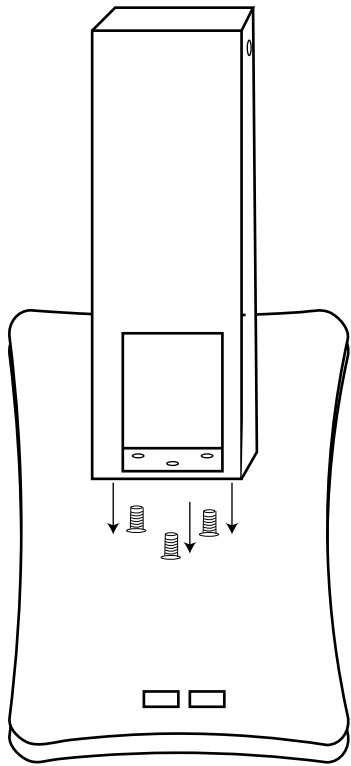


2

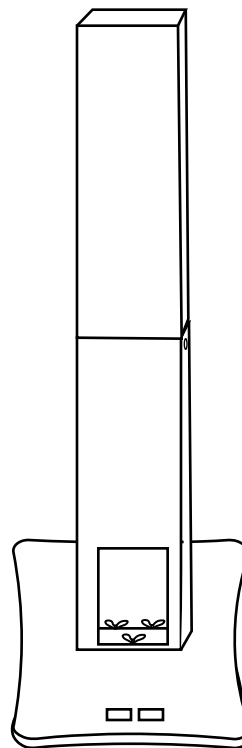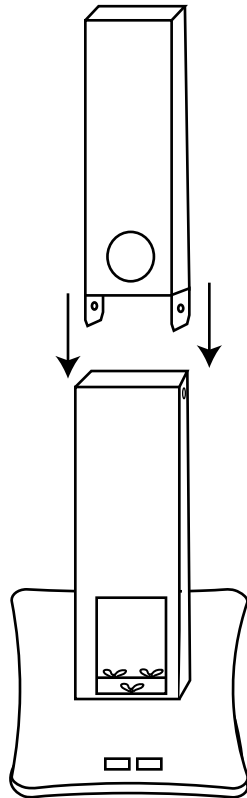


Step 1-2: Align both upright stands to the base. The holes should face the back.

3

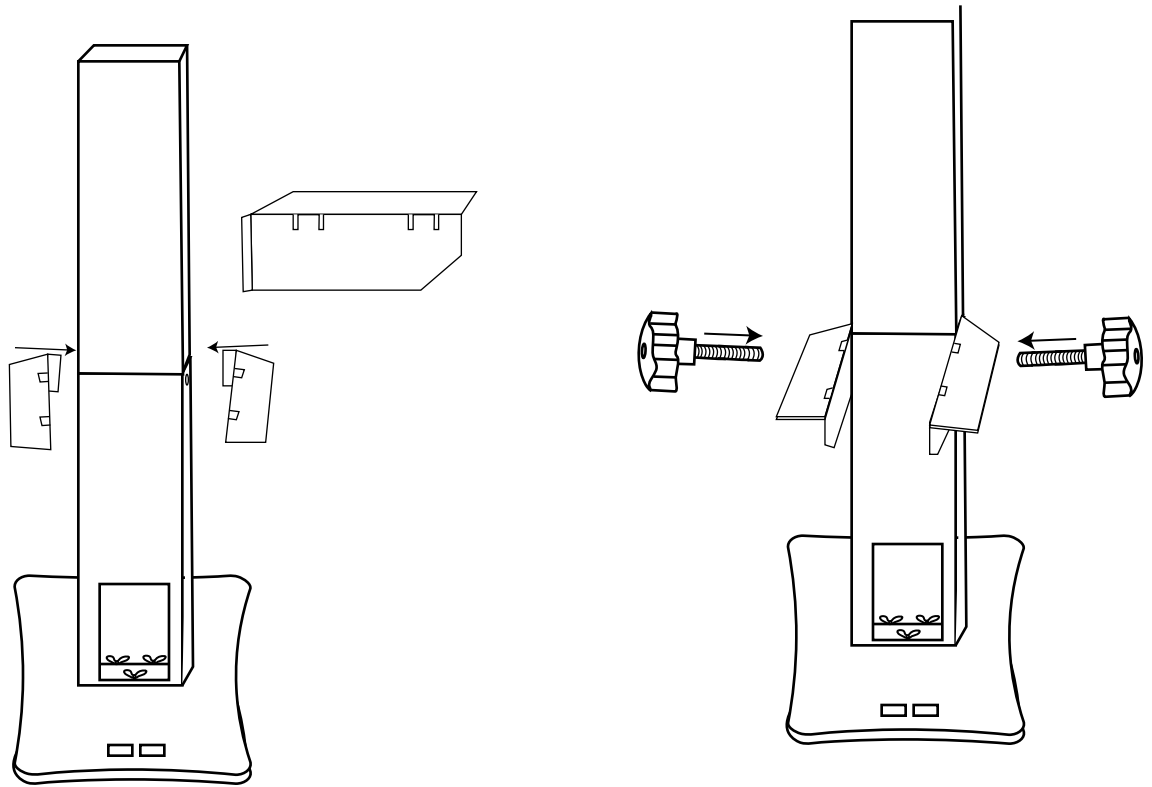


Step 3: (Optional) If you purchased the printer shelf, attach the side extensions before inserting the small star knobs.

4

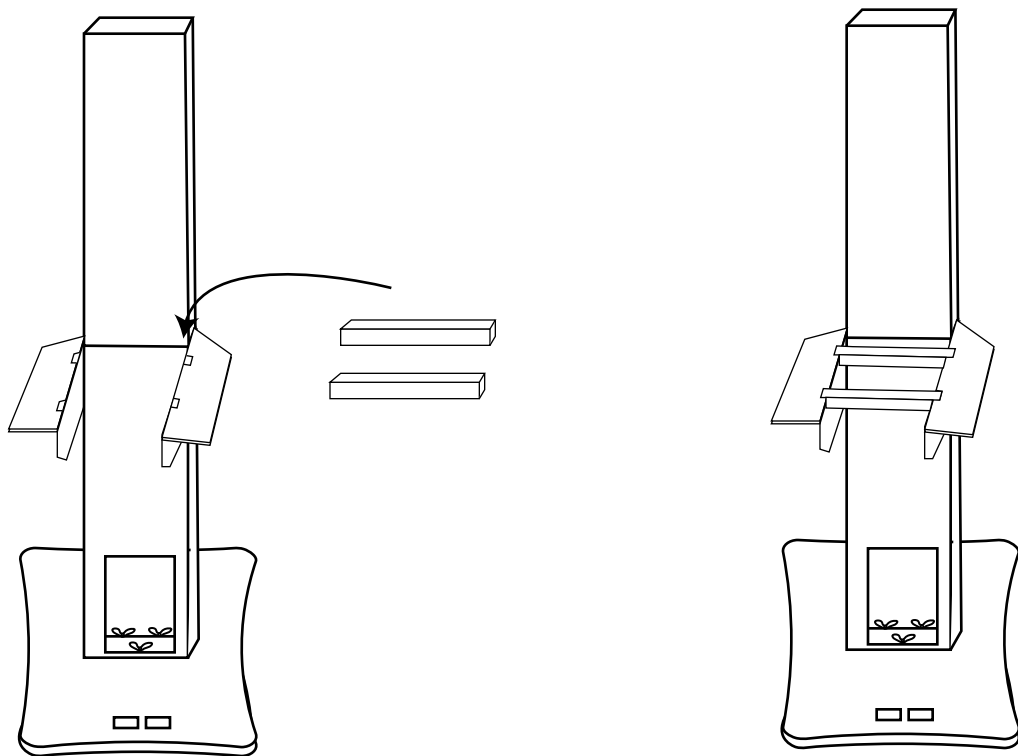


Step 4: Attach the middle support bars.

5

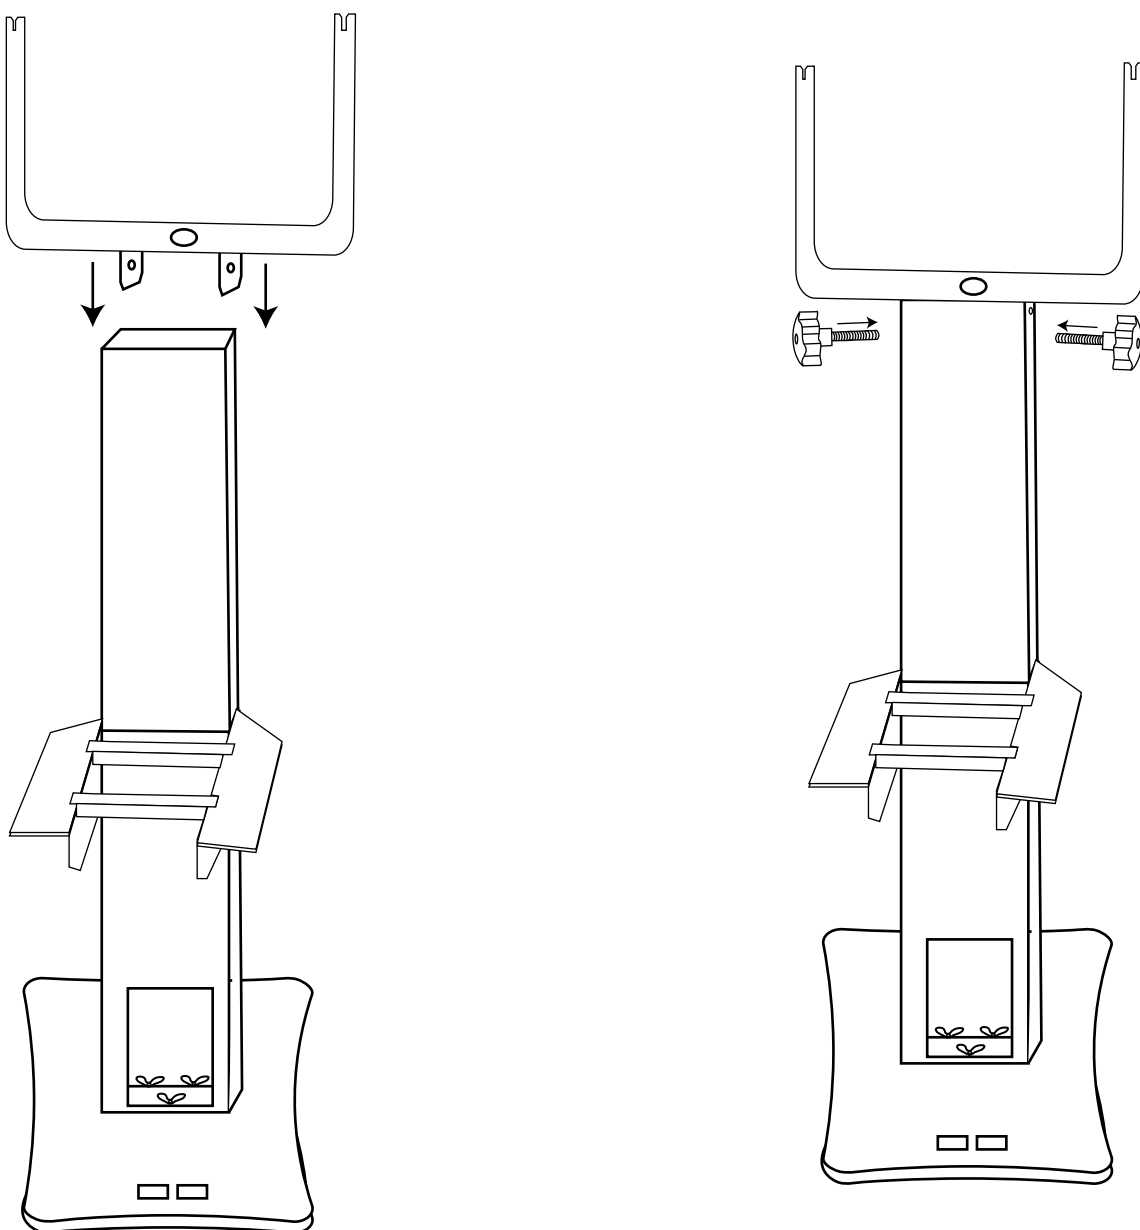


Step 5: Insert the yolk to the upright stand and tighten with the small star knobs.

6

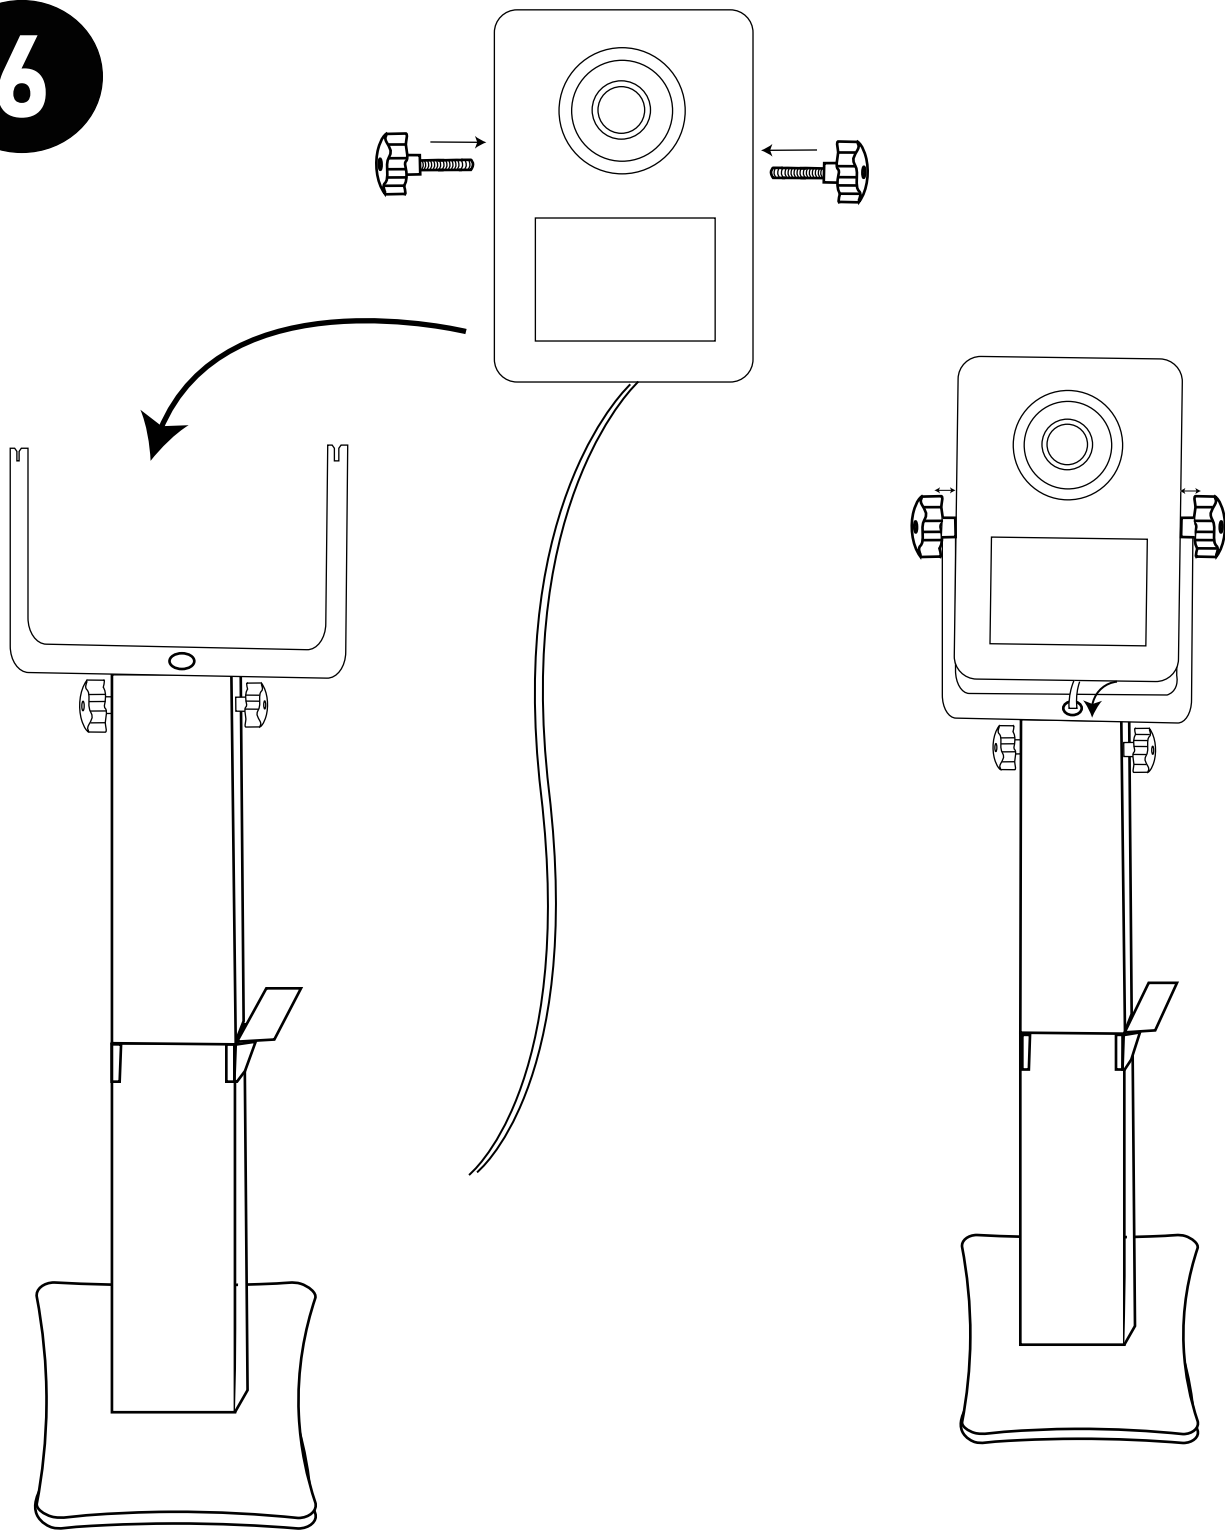

Step 6: Insert two larger knobs both side of LED and tighten with the upper stand.

7

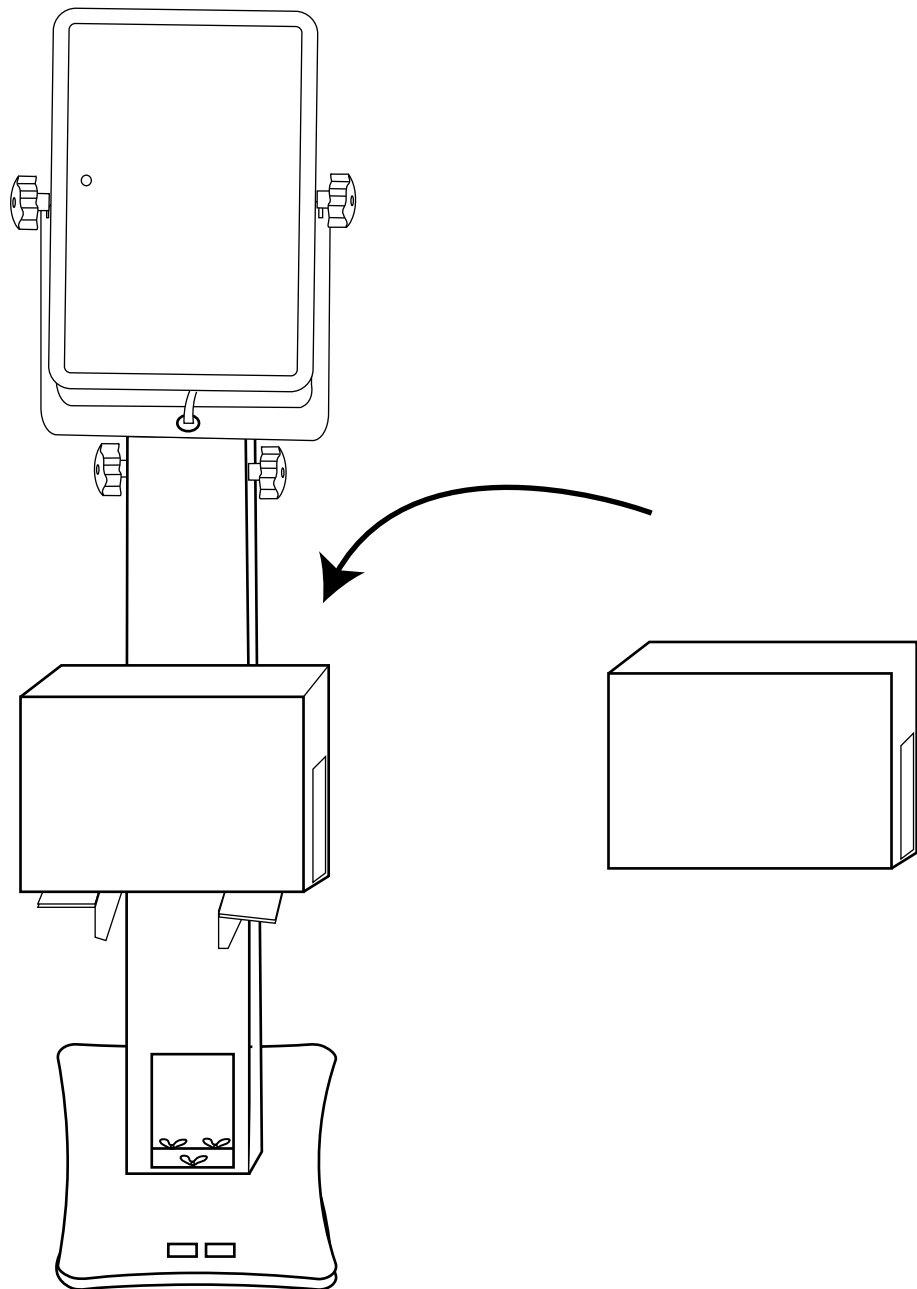

Step 7: (Optional) If you purchased the printer cover, place it on top of the printer after connecting the printer cables to the photo booth.

