


REVOSPIN



USER MANUAL

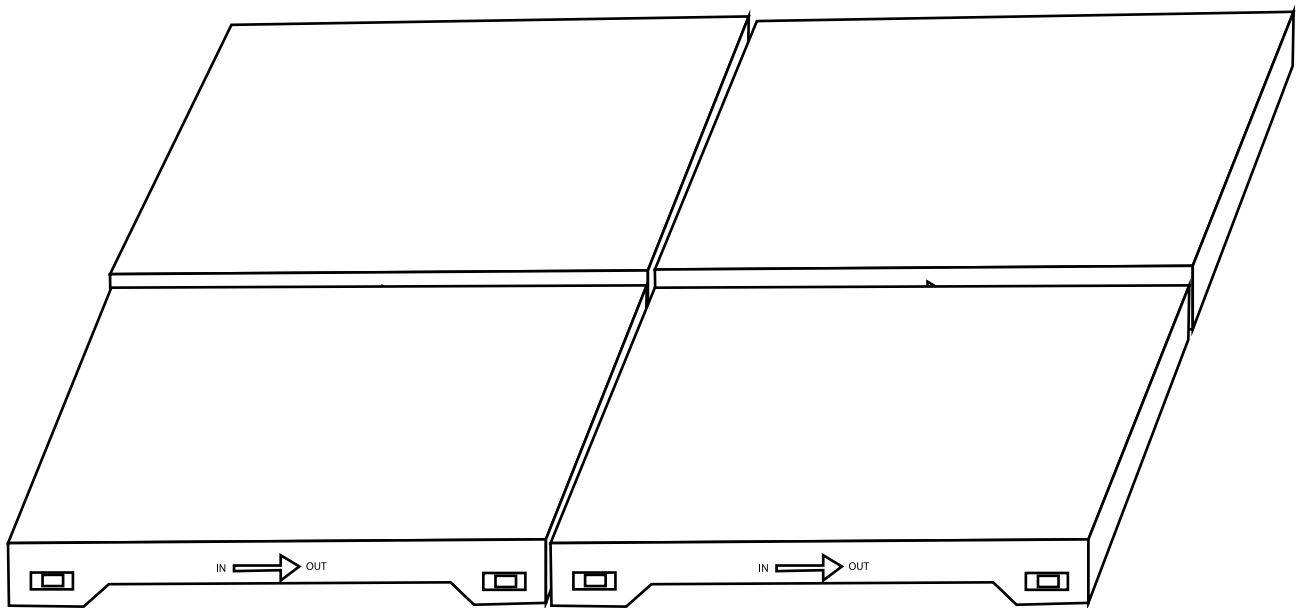

LED FLOOR


How To Assemble

1

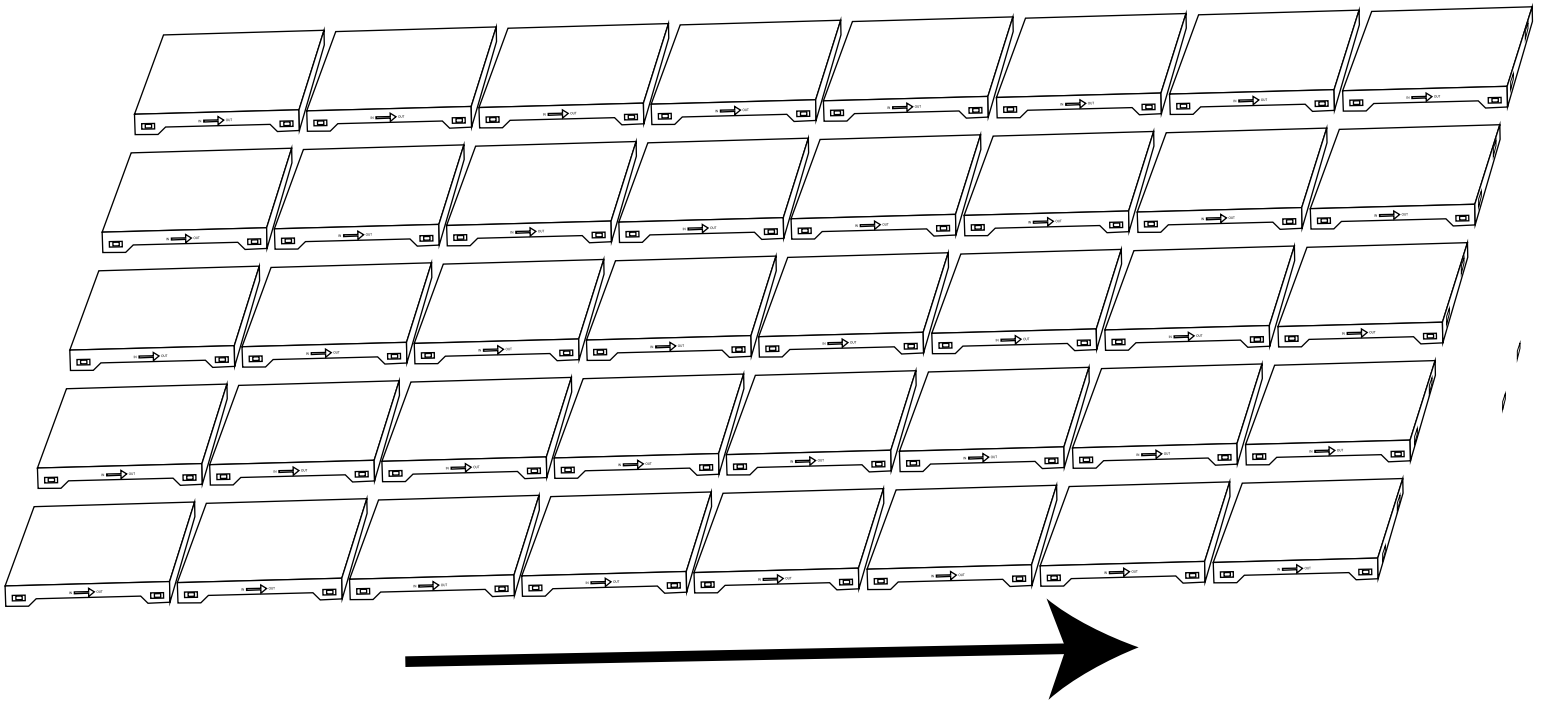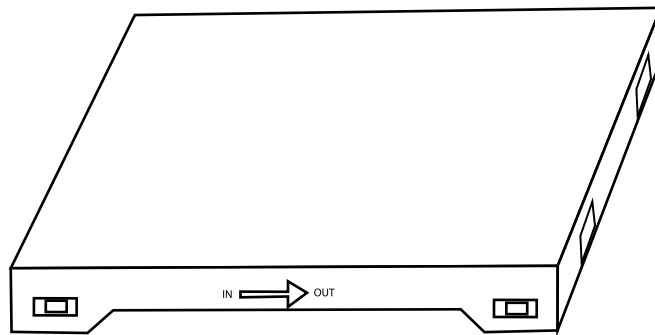


Align each LED panel in one direction. The “in” is the starting point where the power cables will be connected.

2

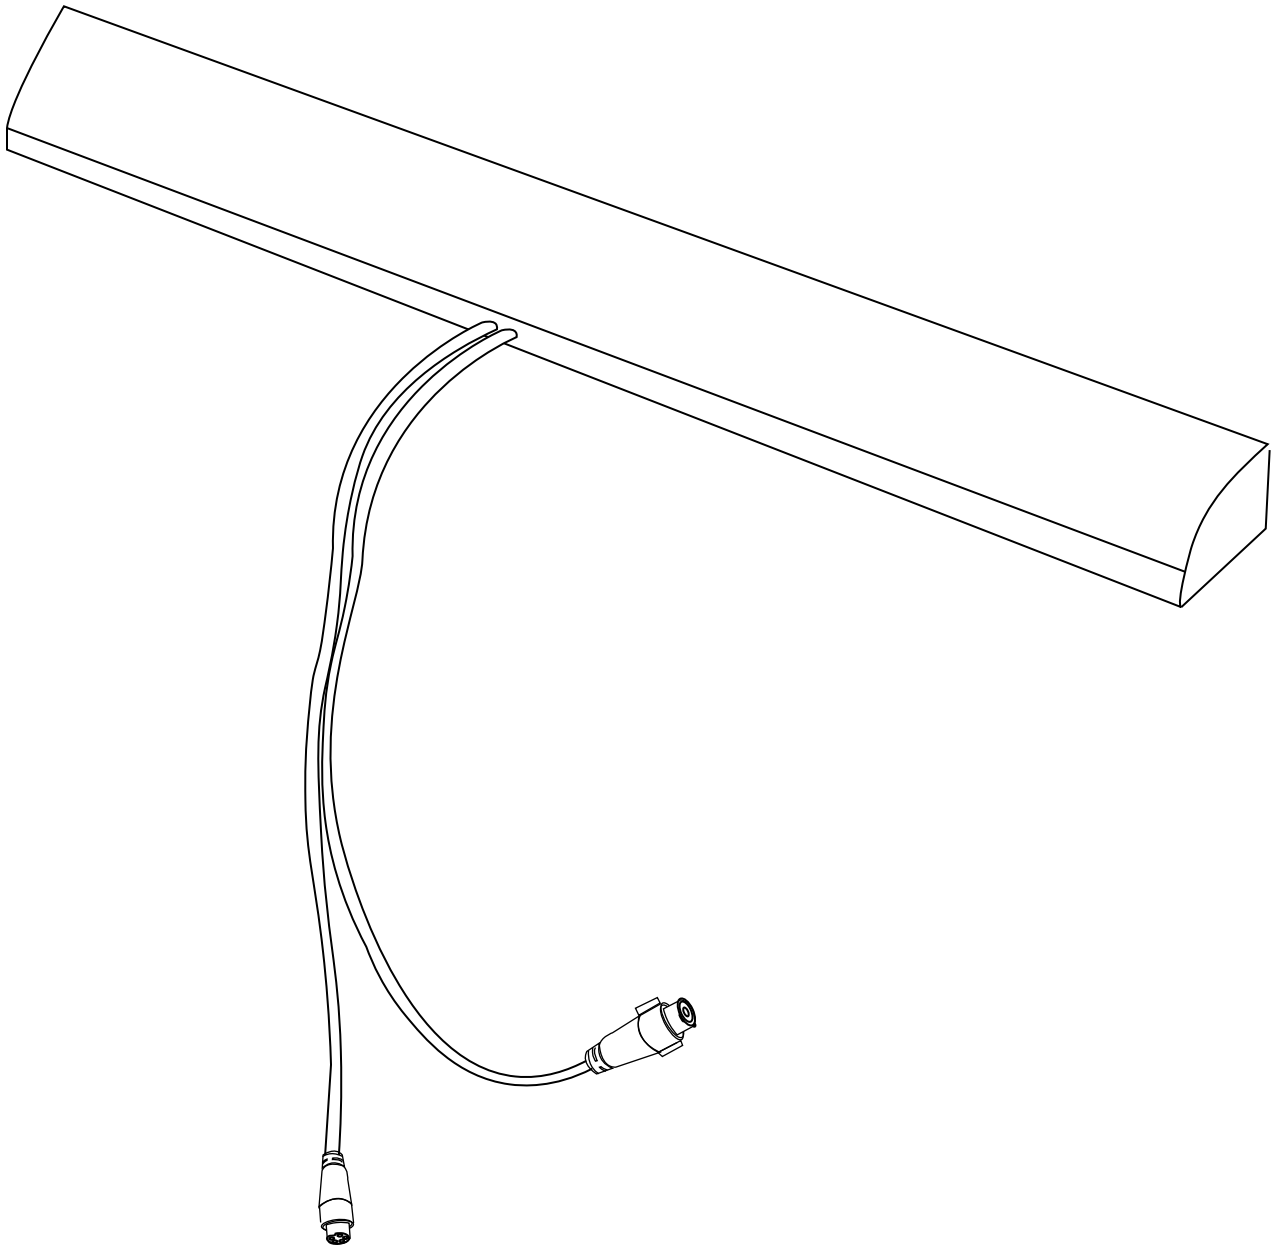


Connect the magnetic siding with power cable on the “in” side of the LED panels.


3

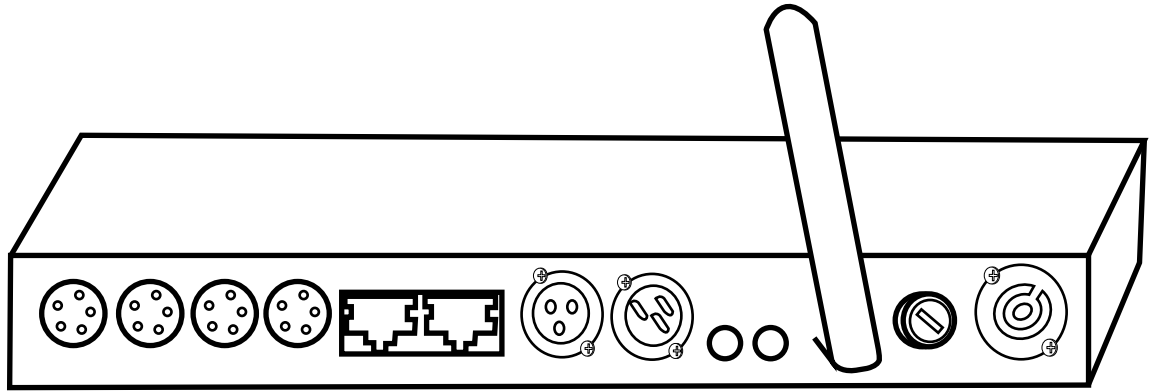

Back view

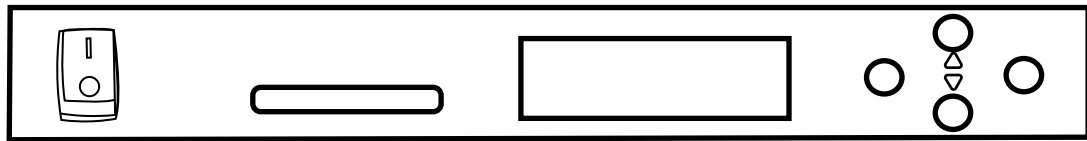


Front view

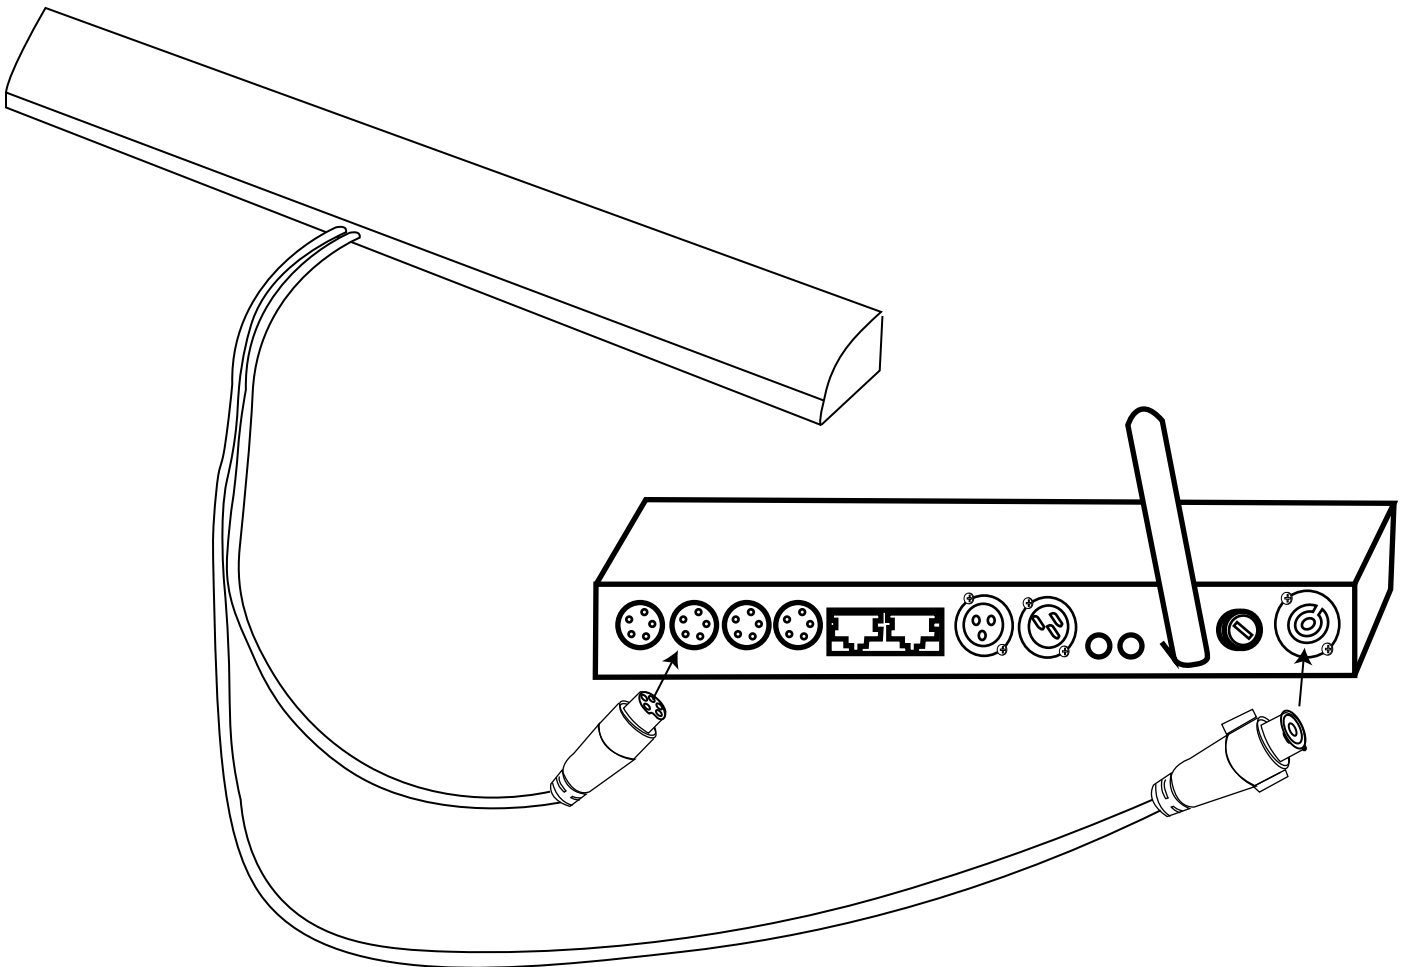

Connect the cables from the magnetic siding to the control box.


4

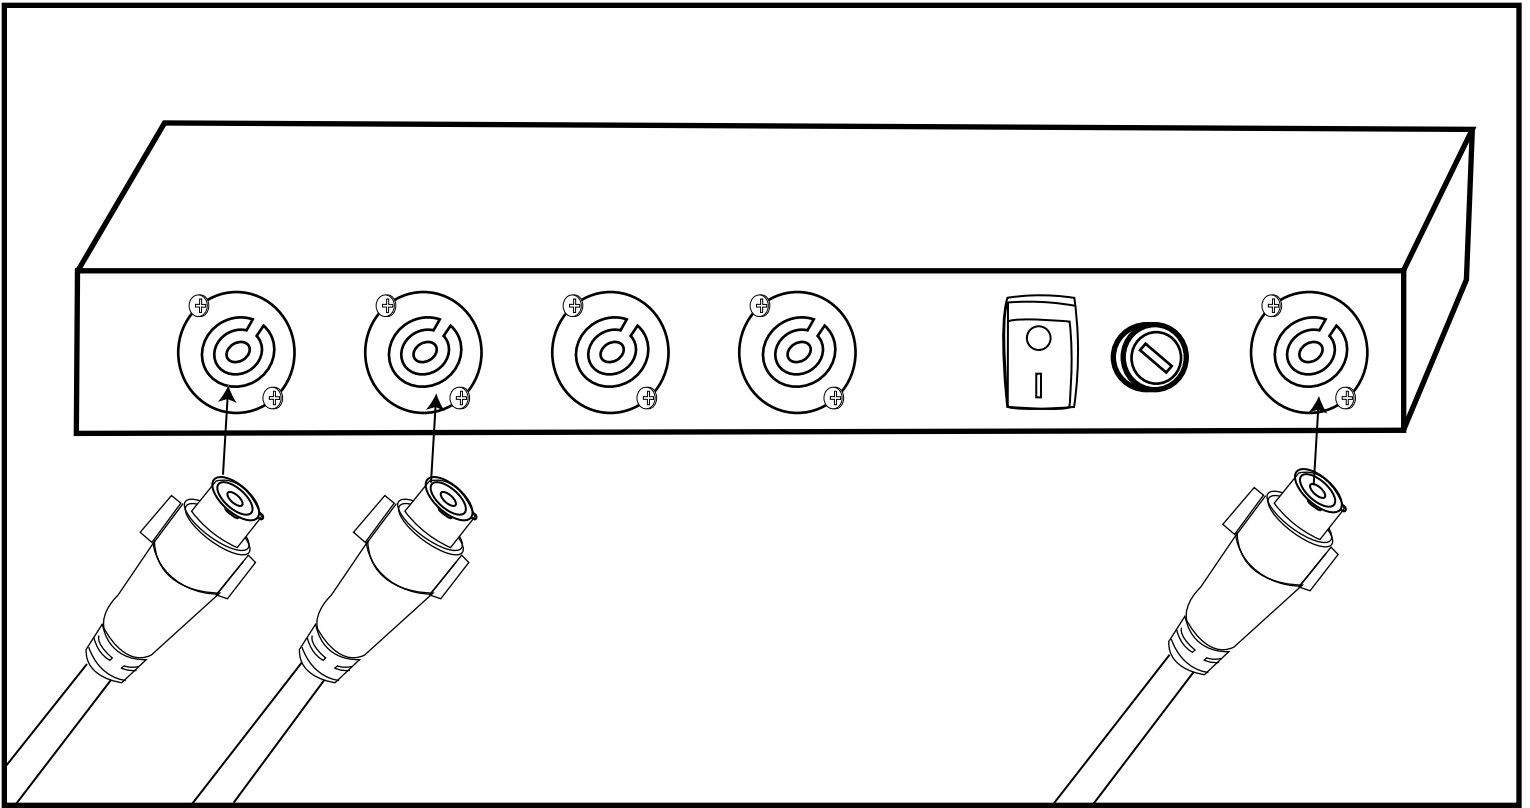


Connect the power cable from the magnetic siding to the power box.

5

Power Box

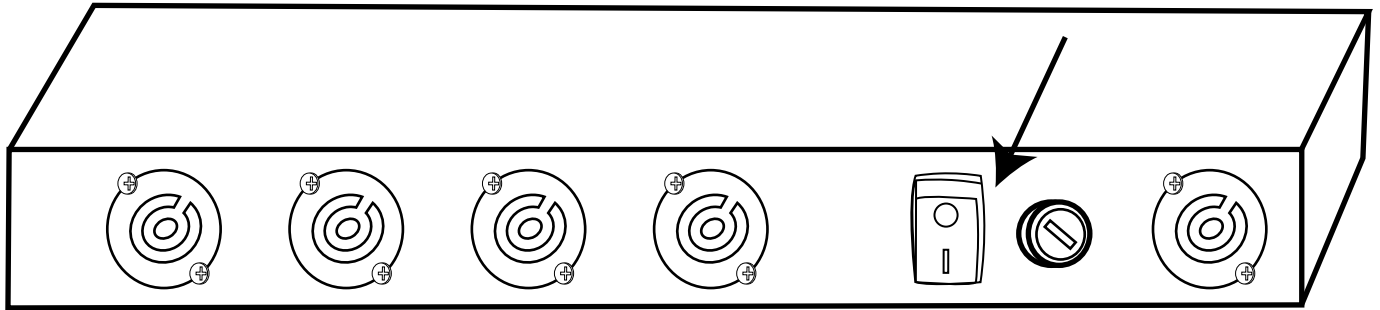


Control Box

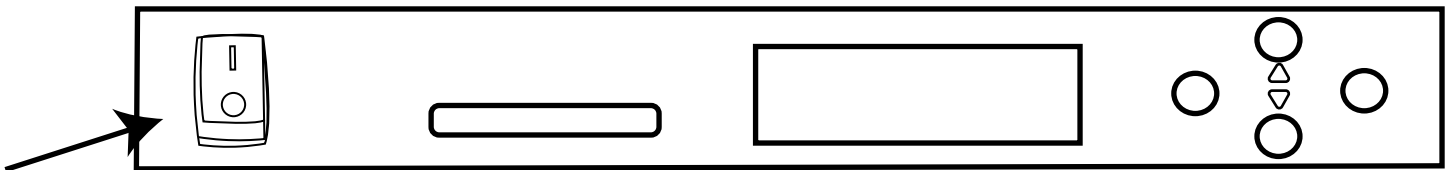

Power on the control box and power box.

6

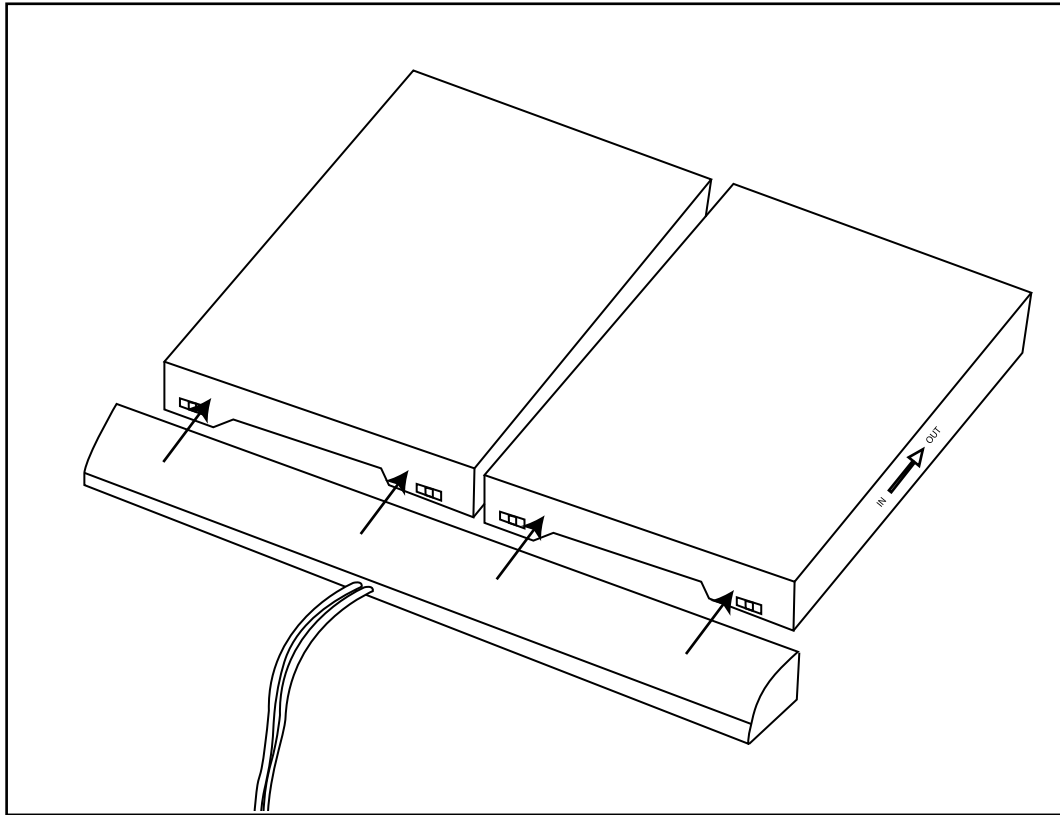

First, attach the siding with the cables to the “in” direction ends.

Attach the remaining non-cable siding to the LED Floor.